



ECCOTARP HazMat

High capacity tank with collapsible structure



INSTRUCTIONS FOR USE

US



Development and Production

metal arsenal®

Metal Arsenal s.r.o.
Owner of Eccotarp USA
trade mark

ECCOTARP USA, inc.
357 West 36th Street
New York, NY 10018
USA


T 1 212-725-9845
Fax 212-683-8516

E info@eccofighter.com
www.eccofighter.com
www.eccotarp.com

This document describes the operation and characteristics of High capacity tank with collapsible structure (hereinafter „tank“). It contains important information about how to use the tanks properly and how to increase their reliability and life. This document must always be available in the place where the tanks are used. Keep it together with the tanks at all times. The operator is responsible for using the tanks safely and in compliance with the instructions in this manual, which applies to any third persons as well. If you have any doubts about the correct use of the tanks, please contact the manufacturer or an authorized dealer.

High capacity tanks with collapsible structure Eccotarp are suitable, for example, for firefighting by helicopter using a bambi bag or for pumping in hard-to-reach places.

High capacity tank with collapsible structure

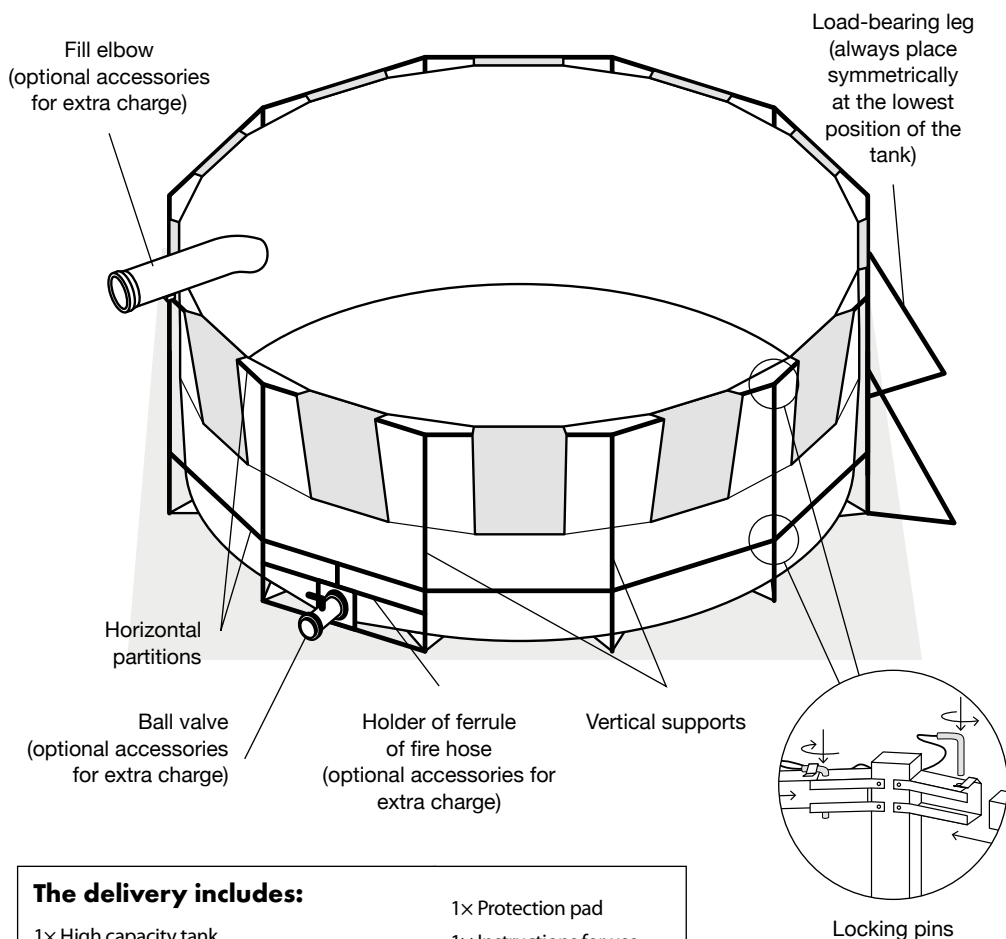

The delivery includes:

- 1× High capacity tank
- 1× Transport bag for tank
- 1× Collapsible structure
- 1× Transport bag for Collapsible structure

- 1× Protection pad
- 1× Instructions for use, incl. warranty certificate
- + Optional accessories as per agreement

Technical details

High capacity tank with collapsible structure

Type	ET TANK 5000	ET TANK 7500	ET TANK 20000	ET TANK 35000	ET TANK 50000
Volume (gal)	1321	1981	5283	9246	13208
Diameter (in)	91	106	165	217	260
Height (in)	51	51	59	59	59
Vertical supports/load-bearing legs	6/2	6/2	10/4	12/4	12/4
Package dimensions (in) and weight of the structure (lb)	12 × 8 × 53 66	12 × 8 × 63 66	20 × 12 × 61 110	20 × 12 × 61 132	20 × 12 × 67 154
Package dimensions (in) and weight of the foil (lb)	12 × 5 × 32 44	12 × 5 × 32 55	16 × 16 × 39 110	24 × 16 × 43 154	32 × 20 × 47 198

For accessory data, see p. 5.

General information



When using the tanks, observe these instructions as well as all the safety notices herein.

1. Tanks are designed as a quick solution for emergency situations. They serve as a backup source of water.
2. Tanks are produced in 5 sizes – volume 1 321, 1 981, 5 283, 9 246 or 13 208 gallons.
3. The tank must be placed on a horizontal surface if possible.
4. They are made of a chemically resistant material – PVC with a protective proofing layer (PES/PVC 2 lb/10.7 ft²) – see Chemical resistance certificate, p. 7.
5. The tanks are not intended for long-term storage of aggressive substances.
6. The range of temperatures for the use of the tanks is from –22 °F and +158 °F.
7. High-capacity tanks with collapsible structure are supplied in transport bags as standard.
8. In order to increase the life and the resistance of the tanks we recommend using the protective pad which is part of the product on standard models.
9. Tanks can be equipped with optional accessories on request at an additional cost – see p. 5.


Instructions for putting the tank into the ready-to-use position



Remove the tank and the collapsible structure from the transport bags (point 1). Spread the protective pad on a flat surface (A) so that there is enough space around it to lay out the individual parts of the folding structure in the shape of a star (C). **The maximum slope of the tank is 8 %!** Place the tank (B) in the center of the protective pad. Start building the structure. Connect the load-bearing legs (point 2) with a crossbar using the locking pins (point 3). Follow these steps around the perimeter of the structure. Use legs with supports (point 2) on the part of the structure that will be subjected to greater pressure due to the slope of the terrain (it is therefore located downhill). Spread the tank sheet on a flat, circular surface. Anchor the lower part of the tank sheet to the lower part of the foot (point 4).

Gradually thread the remaining partitions of the structure along the upper perimeter of the tank tarpaulin (point 5) and anchor to the upper part of the foot using the locking pins. Follow these steps around the perimeter of the structure until you have built the entire tank. To disassemble, repeat the procedure in reverse order.

Illustrated instructions for unfolding the High capacity tank with structure

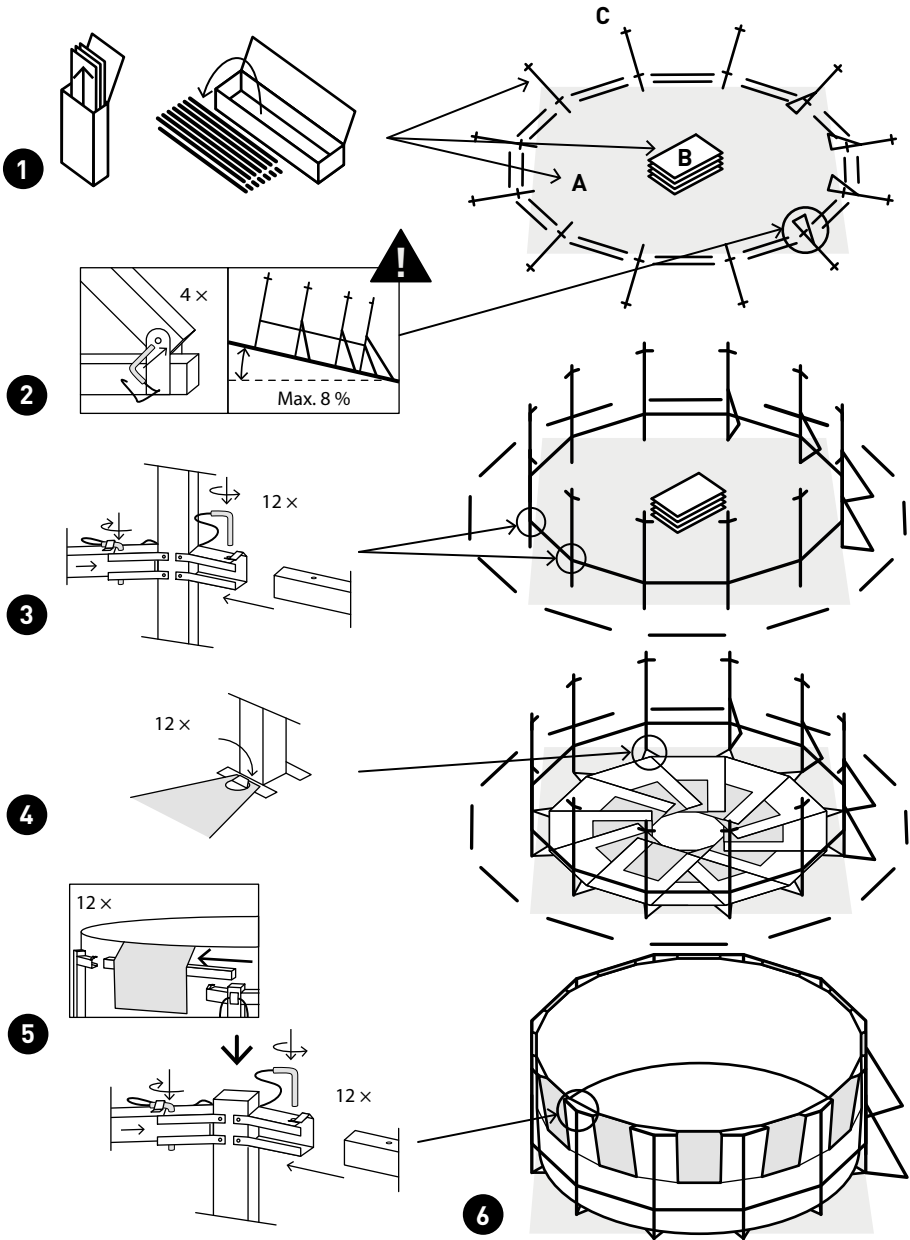

Handling instructions and safety warnings

- 1. If possible, install the tank on a horizontal surface. Permissible terrain inclination is max. 8 %.
- 2. Make sure there are no sharp objects under the tank, such as pieces of broken glass, nails, sharp stones, etc., which might mechanically damage its bottom.
- 3. Do not put the product near fire or any other sources of heat.
- 4. The range of temperatures for the use of the tanks is from -22 °F and +158 °F.
- 5. The tanks are resistant to a large number of different liquids and loose materials (see the Chemical resistance certificate, p. 7).
- 6. The tanks are not intended for long-term storage of aggressive substances.
- 7. Do not move or pull a filled tank on the ground – the manufacturer's warranty does not cover mechanical damage.
- 8. To increase the service life of the tank, the tank is supplemented with a protective pad under the bottom of the tank. **Always use a protective pad. It will not be possible to claim a warranty for any claims caused by the cut.**
- 9. Make sure not to exceed the maximum volume of tank – 1 321, 1 981, 5 283, 9 246 or 13 208 gallons of liquid according to the type of tank.
- 10. After each use it is necessary to wash the tank thoroughly, clean it with suitable detergents and let it dry completely.
- 11. Observe the safety measures for working with hazardous liquids and with substances harmful to the environment.
- 12. Make sure you observe any necessary precautions regarding personal safety, such as the use of protective equipment.

Recommended optional accessories

Standard package of a large-capacity tank with a collapsible structure includes a tank, a structure, a transport bag for the tank, a transport bag for the folding structure and a protective pad. The optional accessories listed below can be purchased with the tank on request.

Type	ET TANK 5000	ET TANK 7500	ET TANK 20000	ET TANK 35000	ET TANK 50000
Standard accessories					
Transport bag for tank	yes	yes	yes	yes	yes
Transport bag for support structure	yes	yes	yes	yes	yes
Protective pad (in)	98 × 98	118 × 118	174 × 174	236 × 236	276 × 276
Optional accessories at extra cost					
Fill elbow C52/B75/other	yes	yes	yes	yes	yes
Ball valve C52/B75/other	yes	yes	yes	yes	yes
Reduction coupling C52/B75/other	yes	yes	yes	yes	yes
Holder of ferrule of fire hose	yes	yes	yes	yes	yes

Holder of ferrule of fire hose is an above-standard construction designed especially for the purpose of firmly anchoring the position of the ball valve with the valve at the bottom of the tank. Thanks to this element, there is no danger of coming out of the holder of ferrule of fire hose of the tank tarpaulin even at full load.

Maintenance and storage

After the draining and prescribed environment-friendly disposal of the collected substance, the product must be washed with proper neutralization detergent (in the case of aggressive substances) and lukewarm water or another suitable detergent. We recommend storing the products folded in the carrying bag so that they are not damaged while not in use. The product must be dried thoroughly before it is put into the bag. For long-term storage, place the product in a dry place out of the reach of UV radiation.

Important contact information

Qualified service:

ECCOTARP USA, inc.
357 West 36th Street
New York, NY 10018
USA

info@eccofighter.com

T: 1 212-725-9845

Repair

Any repair work on the product must always be done by the manufacturer's qualified personnel. In the event of unprofessional repair or design change, the product's proper operation cannot be guaranteed. If you want to request repair, order accessories or lodge a complaint, please, contact your qualified supplier.

Warranty conditions

The warranty period is indicated in the warranty certificate on the last page of these Instructions for use. The warranty period is 24 months and begins on the day indicated in the warranty certificate. The warranty does not apply to the normal wear and tear or to damage caused by improper use or by the instructions in this manual not being observed.

Warning – the warranty does not cover damage from long-term exposure to chemicals. This can also occur after the product is improperly cleaned after intervention. Even a small amount of aggressive chemicals will cause degradation of the material from which it is made during long-term exposure. This can be manifested by microscopic cracks on the surface, or by a change in the properties of the material, which can lead to easy damage and tearing.

Disposal

The product must be disposed of in compliance with applicable legal regulations and with the user's internal directives.

Chemical resistance certificate

Applicable to all types of Collapsible Spill Berms, Tanks, Funnels, Drip trays and Protective Liners.

Resistance levels:

- A) resistant
- B) resistant for at least 3 hours
- C) non-resistant

Name of substance	Chemical formula	Resistance level at the temperature of 20 °C	Resistance level at the temperature of 60 °C
LIQUID SUBSTANCES			
Acetone	CH ₃ COCH ₃	C	C
Acetonitrile	CH ₃ CN	A	A
Ammonia	NH ₃	A	A
Benzene	C ₆ H ₆	B	B
Tar	mixture	C	C
Dimethyl-formamide	C ₃ H ₇ NO	A	A
Ethanol	C ₂ H ₅ OH	B	B
Ethylene glycol	C ₂ H ₆ O ₂	B	B
Ethyl acetate	C ₄ H ₈ O ₂	C	C
Ethylbenzene	C ₈ H ₁₀	A	A
Formaldehyde	CH ₂ O	B	B
Chlorine	Cl	C	C
Chloroform	CHCl ₃	C	C
Transformer oil		A	A
Gear oil		B	B
SAE 40 oil		A	A
Lubricating oil		A	A
Silicone oil		A	A
Turpentine distillates		B	B
Hydrochloric acid	HCl	B	B
Nitric acid	HNO ₃	B	B
Phosphoric acid	H ₃ PO ₄	A	B
Formic acid	HCOOH	B	B
Acetic acid	CH ₃ COOH	A	B
Sulphuric acid	H ₂ SO ₄	A	B
Sulphurous acid	H ₂ SO ₃	A	B
Isopropyl alcohol	C ₃ H ₈ O	B	B
Methanol	CH ₃ OH	B	B
Methylene chloride	CH ₂ Cl ₂	C	C
Sodium chloride solution 20%	NaCl	A	A
Mercury	Hg	A	A

Name of substance	Chemical formula	Resistance level at the temperature of 20 °C	Resistance level at the temperature of 60 °C
Hydrogen sulphide	H ₂ S	A	B
Styrene	C ₈ H ₈	A	A
Pentane	C ₅ H ₁₂	A	A
Toluene	C ₆ H ₅ CH ₃	C	C
Salt water		A	A
Water	H ₂ O	A	A
Hydrogen peroxide	H ₂ O ₂	A	A
Kerosene	C ₉ -C ₁₆	B	B
SOLID SUBSTANCES			
Ammonium acetate	CH ₃ COONH ₄	A	A
Borax	Na ₂ [B ₄ O ₅ (OH) ₄]-8H ₂ O	A	A
Sugar	mixture	A	A
Potassium cyanide	KCN	A	A
Ammonium nitrate	NH ₄ NO ₃	A	A
Calcium nitrate	Ca(NO ₃) ₂	A	A
Phenol	C ₆ H ₅ OH	B	B
Ammonium phosphate	(NH ₄) ₃ PO ₄	A	A
Potassium nitrate	KNO ₃	A	A
Potassium	KOH	A	A
Sodium hydroxide	NaOH	A	A
Ammonium chloride	NH ₄ Cl	A	A
OPERATING FLUIDS			
Gas		B	B
Diesel fuel		B	B
Motor oil		B	B
Methyl tert-butyl ether (MTBE)	C ₅ H ₁₂ O	B	B
Hydraulic oils		B	B

Notice:

Ecotarp collapsible products are compatible to varying degrees with the substances listed above.

However, given the almost unlimited number of potential combinations of chemicals plus the influence of factors such as concentration and temperature, this list does not claim to be definitive and is only intended for informative purposes in predicting the behaviour of the chemicals concerned.

Compatibility with the listed substances cannot be entirely guaranteed. Neither the manufacturer nor the distributor provides any warranty, nor do they accept any responsibility for resultant damage.

For a reliable estimate of the level of resistance to a specific substance, we recommend you to test small samples using miniature laboratory funnels which can be provided upon request by the manufacturer.



The Ecotarp collapsible products are not intended for long-term storage of retrieved spilt liquids. They were developed first and foremost for rapid use in emergencies, for capturing hazardous substances during the time immediately before its correct disposal.

Warranty Certificate



This product is guaranteed for 24 months.

This warranty covers:

for defects caused by a manufacturing defect of the material used, in particular a leak at the welds, a defect in the fittings and any other damage, not caused by demonstrable mishandling by the user or any modification of the product.

This warranty does not cover:

damages caused by improper handling and use of the product and failure to follow the „user manual“. For example, punctures or other damage caused by placing the product in an inappropriate area with sharp objects, use or placing the product near open flames, and other inappropriate uses.

Warning – the warranty does not cover damage from long-term exposure to chemicals. This can also occur after the product is improperly cleaned after intervention. Even a small amount of aggressive chemicals will cause degradation of the material from which it is made during long-term exposure. This can be manifested by microscopic cracks on the surface, or by a change in the properties of the material, which can lead to easy damage and tearing.

The manufacturer is not liable for direct or indirect damage caused by other than the recommended use of the product.

Complaints must be applied within 24 months of purchase from your supplier. When applying please provide your complaint with full details – product serial number, proof of purchase, appropriate photographic documentation and a detailed description of the circumstances in which a fault has occurred.

Product name:

Production code:

Date of sale:

Failure description:

Stamp and signature:

In case of problems, please contact: