

Collapsible Quarantine Container For Electric Cars




INSTRUCTIONS FOR USE




This document describes the operation and characteristics of the Collapsible Quarantine Container (hereinafter "container"). It contains important information about how to use the container properly and how to increase its reliability and life. This document must always be available in the place where the container is used. Keep it together with the container at all times. The operator is responsible for using the container safely and in compliance with the instructions in this manual, which applies to any third persons as well. If you have any doubts about the correct use of the container, please contact the manufacturer or an authorized dealer.


The Collapsible Quarantine Container is, in its construction and dimensions, specially developed for quenching and cooling electric cars and hybrid cars by flooding them with water for the necessary time. Cooling the lower part of the car, where the traction batteries are located, reliably prevents the car's battery from re-igniting and causing another fire.

Collapsible Quarantine Container For Electric Cars

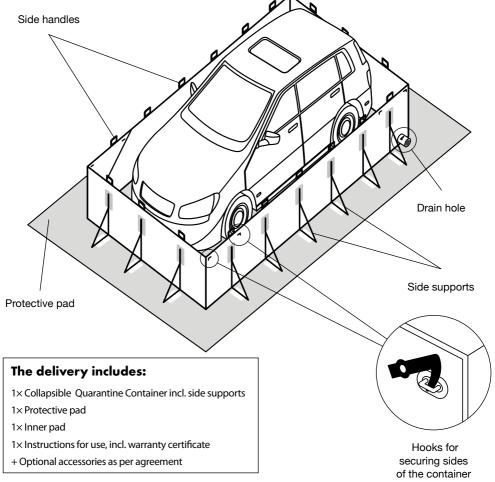

Technical details

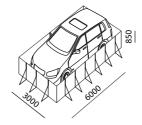

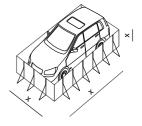

Туре	ET COOL-EL	ET COOL-EL – individual
Dimensions	6000 × 3000 × 850 mm	dimensions according to the customer's request
Volume	14 400 I	
Weight of a container (without metal vertical supports)	375 kg	
Vertical supports – weight (number of supports for the size of container)	2,5 kg/pc (18 pcs)	

General information



When using the containers, observe these instructions as well as all the safety notices herein.

- 1. Containers are designed as a quick solution for emergency situations. They are used exclusively for quenching and cooling electric cars and hybrid cars by flooding them with water for the necessary time.
- 2. Containers are self-supporting, reinforced around the perimeter with side supports.
- 3. The containers do not have welded corners, which allows to unfold and refold any of the sides for the possibility of simply and guickly pushing the damaged vehicle into the container space.
- 4. The container can be laid out on a flat surface and conveniently washed.
- 5. Containers are made of chemically resistant selfextinguishing material – PVC with a special surface treatment (PES/PVC 900 g/m²) - see Chemical resistance certificate, page 10.


- 6. The temperature range of using the container is -30 °C to +70 °C.
- 7. Containers are supplied in transport packaging.
- 8. When using the containers, it is necessary to use the supplied standard accessories: protective pad and an inner pad – page 8. Both significantly extend the durability and service life of the container.
- 9. The container can be produced in a size according to the customer's wishes.
- 10. The container can be equipped with a ball valve on request.


Instructions for assembling the container into the standby position




Remove the container, protective pad, inner pad and side supports from the transport packaging. Spread the protective pad on a flat surface. Spread the unfolded container on the pad. For the entire area on the bottom of the container, place the inner pad so that it extends over the short folded side of the container on one side. Choose the side of the container through which you will push the damaged car into the container space. Lift one long side of the container and install the side supports into the anchor plates on the sides and at the bottom of the container. Repeat the same with the other long side of the container. Then lift the short side, over which the inner pad is not draped, and secure it with the yellow hooks. Install the side supports. Leave the shorter side of the container with the overhanging inner pad open. The container is now ready to push the damaged electric vehicle into the container area. After placing the vehicle into the container, erect the last side of the container, securing it with yellow hooks and placing the side supports. The vehicle is ready to be flooded.

Illustrated instructions for assembling a Collapsible Quarantine Container

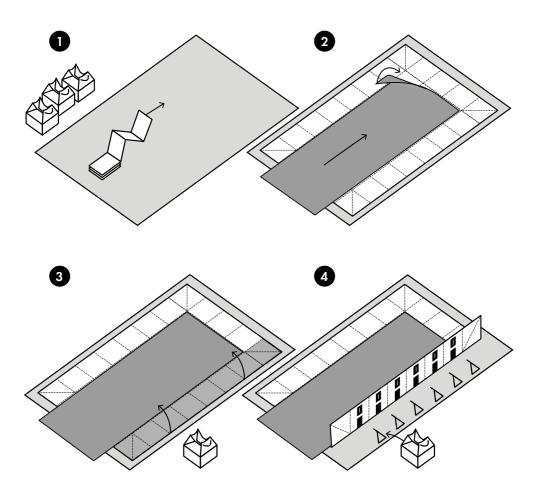


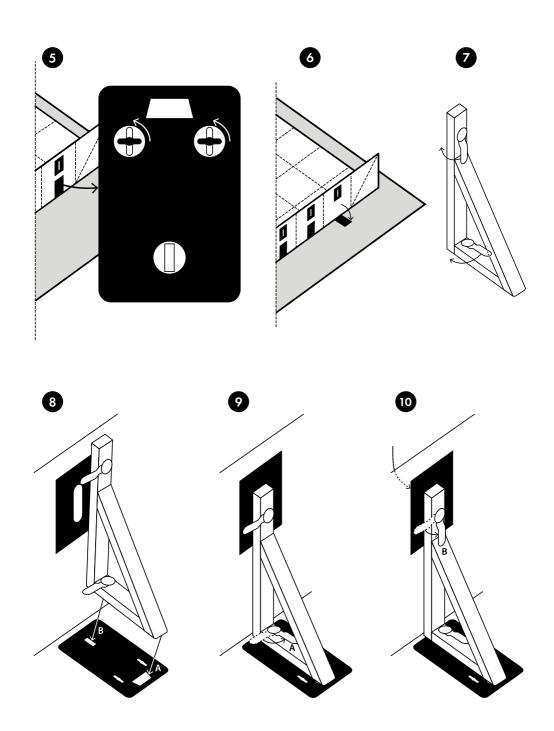

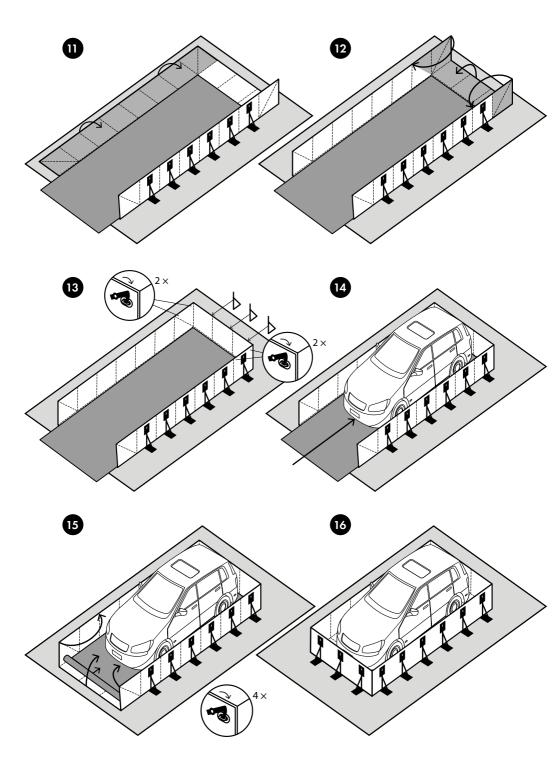

Handling instructions and safety warnings

- 1. If possible, place the Collapsible Quarantine Container on a flat surface.
- 2. Make sure there are no sharp objects under the container, such as pieces of broken glass, nails, sharp stones, etc., which might mechanically damage its bottom.
- 3. Do not put the product near fire or any other sources of heat.
- 4. The temperature range of using the container is -30 $^{\circ}$ C to +70 $^{\circ}$ C.
- The containers are resistant to a large number of different liquids and loose materials (see the Chemical resistance certificate, p. 10).
- 6. Fill the container up only to the upper weld of the reinforcement.
- Do not move or pull an empty or a filled container on the ground the manufacturer's warranty does not cover mechanical damage.
- 8. Side handles located around the container are used to move the container.
- After each use it is necessary to wash the container thoroughly, clean it with suitable detergents and let it dry completely.
- 10. Observe the safety measures for working with hazardous liquids and with substances harmful to the environment.
- 11. Make sure you observe any necessary precautions regarding personal safety, such as the use of protective equipment.

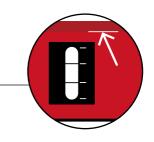

Recommended accessories

We supply the following standard accessories for the Collapsible Quarantine Container. As an optional accessory for an additional fee, we offer a ball valve for the container.

Name	ET COOL-EL	ET COOL-EL – individual
Standard accessories		
Transport bag	yes (2 kg)	yes
Protective pad under the container	8700 × 5700 mm (34 kg)	yes
Inner pad	9800 × 3000 mm (30,5 kg)	yes
Drain hole B75	yes	yes
Overall dimensions of the package (container, side supports, pads) for the specified container size – transport box	1250 × 1250 × 1095 mm	
Weight of the package (container, side supports, pads) for the specified container size – without transport box / with transport box	320 / 375 kg	
Optional accessories at extra cost		
Ball valve C52/B75/other	yes	yes

Maintenance and storage

After the draining and prescribed environment-friendly disposal of the collected substance, the product must be washed with proper neutralization detergent (in the case of aggressive substances) and lukewarm water or another suitable detergent. We recommend storing the containers folded in the carrying bag so that they are not damaged while not in use. The container must be dried thoroughly before it is put into the bag. For long-term storage, place the container in a dry place out of the reach of UV radiation.

Important contact information

Manufacturer and qualified service: Metal Arsenal s.r.o. Poděbradova 1920 289 22 Lysá nad Labem Czech Republic

info@eccotarp.com T: +420 737 802 153

T: +420 777 472 640

T: +420 603 117 839

Repair

Any repair work on the container must always be done by the manufacturer's qualified personnel. In the event of unprofessional repair or design change, the product's proper operation cannot be guaranteed. If you want to request repair, order accessories or lodge a complaint, please, contact your qualified supplier.

Warranty conditions

The warranty period is indicated in the warranty certificate on the last page of these Instructions for use. The warranty period is 24 months and begins on the day indicated in the warranty certificate. The warranty does not apply to the normal wear and tear or to damage caused by improper use or by the instructions in this manual not being observed.

Warning – the warranty does not cover damage from long-term exposure to chemicals. This can also occur after the product is improperly cleaned after intervention. Even a small amount of aggressive chemicals will cause degradation of the material from which it is made during long-term exposure. This can be manifested by microscopic cracks on the surface, or by a change in the properties of the material, which can lead to easy damage and tearing.

Disposal

The product must be disposed of in compliance with applicable legal regulations and with the user's internal directives.

Chemical resistance certificate

Applicable to all types of Collapsible Spill Bunds, Tanks, Funnels, Drip trays and Protective Liners.

Resistance levels:

- A) resistant
- B) resistant for at least 3 hours
- C) non-resistant

Name of substance	Chemical formula	Resistance level at the tem- perature of 20°C	Resistance level at the tem- perature of 60 °C	Name of substance	Chemical formula	Resistance level at the tem- perature of 20 °C	Resistance level at the tempe- rature of 60 °C
LIQUID SUBSTANCES	5						
Acetone	CH₃COCH₃	С	C	Hydrogen	H ₂ S	Α	В
Acetonitrile	CH₃CN	Α	A	sulphide			
Ammonia	NH ₃	Α	A	Styrene	C ₈ H ₈	A	Α
Benzene	C ₆ H ₆	В	В	Pentane	C ₅ H ₁₂	Α	A
Tar	mixture	C	C	Toluene	C ₆ H ₅ CH ₃	C	C
Dimethyl- formamide	C₃H ₇ NO	Α	A	Salt water	H ₂ O	A	A A
Ethanol	C ₂ H ₅ OH	В	В	Water	-		
Ethylene glycol	C ₂ H ₆ O ₂	В	В	Hydrogen peroxide	H_2O_2	Α	Α
Ethyl acetate	C ₄ H ₈ O ₂	C	C	Kerosene	C ₉ -C ₁₆	С	С
Ethylbenzene	C ₈ H ₁₀	A	A				
Formaldehyde	CH ₂ O	В	В	SOLID SUBSTANCES			
Chlorine	CI	C	C	Ammonium	CH₃COONH₄	Α	A
Chloroform	CHCl₃	C	C	acetate	Na IB O (OU) 1 OU O	A	
Transformer oil		Α	A	Borax	Na ₂ [B ₄ O ₅ (OH) ₄]•8H ₂ O mixture		A
Gear oil		В	В	Sugar	KCN	A	A
SAE 40 oil		Α	A	Potassium cyanide	NH ₄ NO ₃	A	A
Lubricating oil		Α	A	Ammonium nitrate Calcium nitrate		A	A
Silicone oil		A	A	Phenol	Ca(NO ₃) ₂ C ₆ H ₅ OH	B	B
Turpentine distillates		В	В	Ammonium	(NH ₄) ₃ PO ₄	A	A
Hydrochloric acid	HCI	В	В	phosphate	KNO		
Nitric acid	HNO ₃	В	В	Potassium nitrate	KNO₃ KOH	A	A
Phosphoric acid	H₃PO₄	Α	В	Potassium		A	A
Formic acid	HCOOH	В	В	Sodium hydroxide	NaOH		
Acetic acid	CH₃COOH	Α	В	Ammonium chloride	NH₄CI	Α	Α
Sulphuric acid	H₂SO₄	Α	В				
Sulphurous acid	H ₂ SO ₃	Α	В	OPERATING FLUIDS			
Isopropyl alcohol	C₃H ₈ O	В	В	Petrol		В	В
Methanol	CH₃OH	В	В	Diesel fuel		В	В
Methylene chloride	CH ₂ Cl ₂	С	C	Motor oil		В	В
Sodium chloride solution 20%	NaCl	Α	Α	Methyl tert-butyl ether (MTBE)	$C_5H_{12}O$	В	В
Mercury	Hg	Α	A	Hydraulic oils		В	В

Notice:

Eccotarp collapsible products are compatible to varying degrees with the substances listed above.

However, given the almost unlimited number of potential combinations of chemicals plus the influence of factors such as concentration and temperature, this list does not claim to be definitive and is only intended for informative purposes in predicting the behaviour of the chemicals concerned.

Compatibility with the listed substances cannot be entirely guaranteed. Neither the manufacturer nor the distributor provides any warranty, nor do they accept any responsibility for resultant damage.

For a reliable estimate of the level of resistance to a specific substance, we recommend you to test small samples using miniature laboratory funnels which can be provided upon request by the manufacturer.

Notes	

Warranty Certificate

This product is guaranteed for 24 months.



This warranty covers:

for defects caused by a manufacturing defect of the material used, in particular a leak at the welds, a defect in the fittings and any other damage, not caused by demonstrable mishandling by the user or any modification of the product.

This warranty does not cover:

damages caused by improper handling and use of the product and failure to follow the "user manual". For example, punctures or other damage caused by placing the product in an inappropriate area with sharp objects, use or placing the product near open flames, and other inappropriate uses.

Warning – the warranty does not cover damage from long-term exposure to chemicals. This can also occur after the product is improperly cleaned after intervention. Even a small amount of aggressive chemicals will cause degradation of the material from which it is made during long-term exposure. This can be manifested by microscopic cracks on the surface, or by a change in the properties of the material, which can lead to easy damage and tearing.

The manufacturer is not liable for direct or indirect damage caused by other than the recommended use of the product.

Complaints must be applied within 24 months of purchase from your supplier. When applying please provide your complaint with full details – product serial number, proof of purchase, appropriate photographic documentation and a detailed description of the circumstances in which a fault has occurred.

Product name:		
Production code:	 Stamp a signatui	nd re:
Date of sale:	In case of problem please of	ns,
Failure description:		